

User Manual
Manuel de l'utilisateur
OHREX
En- Fr

English 1-20

Français 21-36

This manual is applicable to the following OHREX GPS navigator models:

786, N76, N700, N800, N900, A77, S7, S8, S9, 2021-01FU-4-40661

FCC ID: 2A2PQ-786

This device complies with Part 15 of the FCC rules and industry Canada-license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

- If you drive a truck, make sure the vehicle is **truck** in route settings.
- If you drive with trailer attached, make sure the vehicle is **truck**.
- If you drive a vehicle (e.g. car, SUV, or pickup) without trailer attached, make sure the vehicle is **car**.
- Any incorrect selection in route settings may result in longer distances or driving onto prohibited roads.
- Updates happen once a year, you will be notified when updates are available and given update instructions.

For any questions, please contact us first, don't rush to apply for refund and return.


PLEASE READ FIRST-----	4
Access Video Tutorials-----	4
QUICKSTART GUIDE-----	5
Startup Screen: the Navigation Menu-----	5
Find Menu-----	6
Navigation to an Address-----	6
Enter by Postcode-----	7
Navigation to a Place of Interest-----	8
The Map Screen-----	9
Setting Menu-----	10
User Manual-----	11
Function of Physical Buttons-----	11
Device Interface Menus-----	12
Locating a GPS Signal-----	13
Launching Navigation-----	13
Navigation Not Working?-----	13
No Sound?-----	15
Setting Time and Date-----	15
Navigation Language Selection-----	16
Navigation Voice Selection-----	16
Vehicle Selection and Profile Settings-----	16
How to Set Units to KM or MPH-----	17
Navigation Data Fields-----	18
FM Transmitter-----	18
Troubleshooting & FAQ-----	20

PLEASE READ FIRST

- The built-in map is the latest. Please use GPS navigation right away.
- Before using the navigation, please make sure to select the correct route model in route settings.



->



- Any incorrect selection in route settings may result in longer distances or driving onto prohibited roads
- If you drive a truck, make sure the vehicle is **truck** in route settings.
- If you drive with trailer attached, make sure the vehicle is **truck** in route settings.
- If you drive a vehicle (e.g. car, SUV, or **pickup**) without trailer attached, make sure the vehicle is **car** in route settings.
- Do NOT use the USB cable for charging in your vehicle. It will NOT charge the device. The data transfer USB cable must ONLY be used for connecting the device to a computer when advised for updating.
- Do NOT connect the USB cable to a computer, laptop, or PC to charge the device, it cannot charge the device. Use a mobile phone charger to charge the GPS device.
- The GPS application will not work while plugged into a computer and will indicate the data transfer mode on the screen.
- GPS signal will only be connected in open or outside areas or in your vehicle. It does not work well inside buildings. The GPS can only find your location and calculate your route with a signal.
- If the GPS navigation application fails to launch when tapping the GPS icon on the home page, please make sure to set the NAVI configuration – please look in the user guide under NaviConfig and follow instructions.
- Please make sure you observe the correct GMT, for instance, The Eastern Time Zone (ET) is an area 5 hours behind Greenwich Mean Time (GMT-5) during the winter months (referred to as Eastern Standard Time or EST) and 4 hours behind Greenwich Mean Time (GMT-4) during the summer months (referred to as Eastern Daylight Time or EDT). Depending on your location the home screen time may need to show one hour behind to show correctly in the Navigation application.

QUICKSTART GUIDE

Startup Screen: the Navigation Menu



Whenever the software is started, the navigation menu appears. You have the following options:

- Tap  **Destination** to select your destination by entering an address or selecting a place of interest, a location on the map or one of your Favourite destinations. You can also look up your recent destinations from the Smart History or by entering its coordinate. Note Find setting may also be called Destination.

- Tap  **Route Options** to display the route parameters. You can view the route in its full length on the map. You can also perform route-related actions such as editing or canceling your route, setting a start point for the route, picking route alternatives, avoiding parts of the route, simulating navigation or adding the destination to your Favorites.


- Tap  **More...** to customize the way the navigation software works, simulate demo routes, or to run some additional applications.

- Tap **Show Map** to start navigating on the map.

- Tap  to select settings.

- Tap  to stop navigation and exit the software.

Find Menu

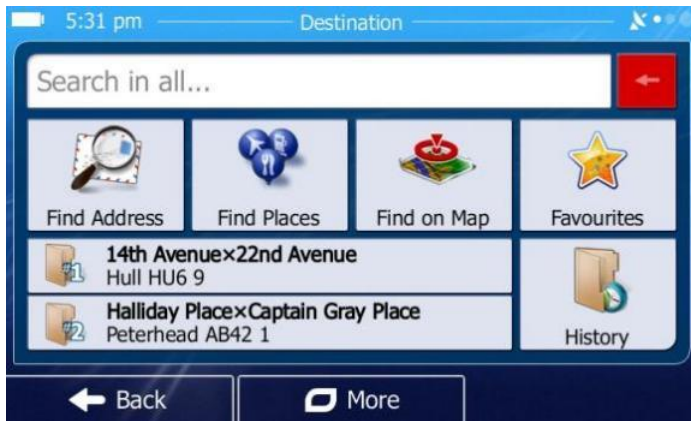

In the Navigation menu, tap  the following options:

The Destination menu provides you with

- Tap Find Address  to specify an address as a destination.
- Tap Find Places  to select a place of interest as a destination.
- Tap Find on Map  to navigate to a location selected on the map.
- Tap Favorites  to choose from the list of your favourite destinations.
- Tap  or  to navigate to the recent destination that is shown on the button.
- Tap History  to choose from the list of all recent destinations.
- Tap  for other search methods.

Navigation to an Address



In the Navigation menu, tap Destination , then tap find address . If a GPS signal is present the screen proposes the city or town where you are located, if not it may be blank.

👉 If needed, change the country. Tap the button showing the name of the country.

1. Use the keyboard to enter the name of the country.

2. After entering a couple of characters, the list of countries that match the entered string appears. Tap the country of your choice.

☞ If needed, change the city/town. Tap the button showing the name of the city/town, and use the keyboard to enter a part of its name. As you enter letters, the most likely city/town name is always shown in the input field.


Enter by Postcode

You can enter the destination by postcode in the city or town field. **Enter a space** between the postcodes or it may not continue i.e. SA4 _ OFB in United Kingdom, 85365 in United States. **Be sure to press the middle spacebar in Canada or UK.**




You have the following options:

- Tap  to select the city/town that is offered in the input field.
- Tap  to correct your entry.
- Tap  Results to browse the list of city/town names matching your input. Select a city/town from the list.

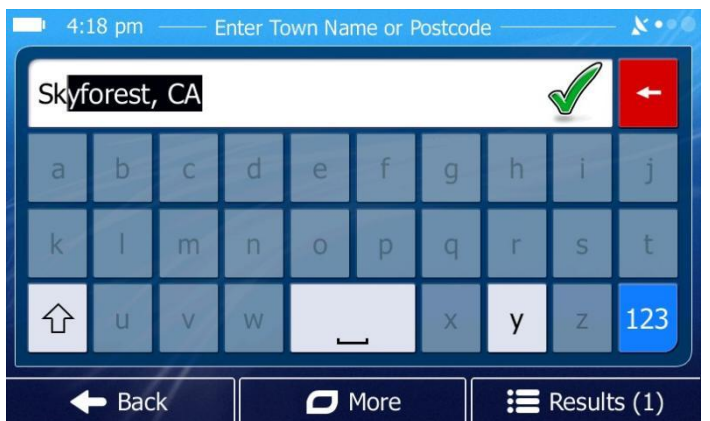

☞ Enter the street name: Optional, may not be required if using postcode.

1. Tap .

2. Use the keyboard to enter a part of the street name.

3. Tap  to select the street that is offered in the input field or tap  Results to browse the list of all streets matching your input.

Select a street from the list. Enter the house number: Optional


Enter the house number: Optional

1. Tap
2. Use the keyboard to enter the house number.
3. Tap ☒ Done to finish entering the address.

The map appears with the selected destination in the middle. Tap another map location if necessary, then tap to confirm the destination.

After a short summary of the route parameters, the map appears showing the entire route. Wait for a few seconds or tap and start navigating.

Navigation to a Place of Interest

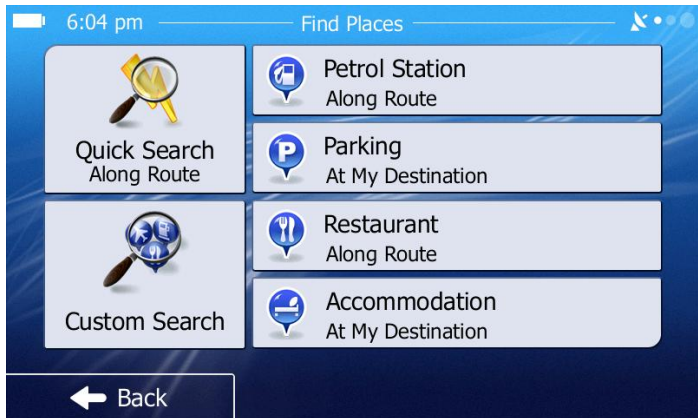

On the Map screen, tap to return to the Navigation menu. In the Navigation menu, tap , then tap Find Places . You are offered the following preset search categories:

- Tap to get a list of petrol stations along the route or if it is not available, around your current position or your last known position.
- Tap to get a list of parking lots near the destination or if it is not available, around your current position or your last known position.
- Tap to get a list of restaurants along the route, around your current position or your last known position.
- Tap to get a list of accommodation near the destination, around your current position or your last known position.


You can also tap Quick Search and search for a place by entering its name.

If none of the above is appropriate, tap Custom Search to find a place of interest at the following locations:

- Tap to search around the current position or if it is not available, around the last known position.
- Tap to search for a place within a selected city or town.
- Tap to search for a place around the destination of the active route.
- Tap to search along the active route, and not around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as

searching for upcoming petrol stations or restaurants.


An Example to Navigating to a Place of Interest

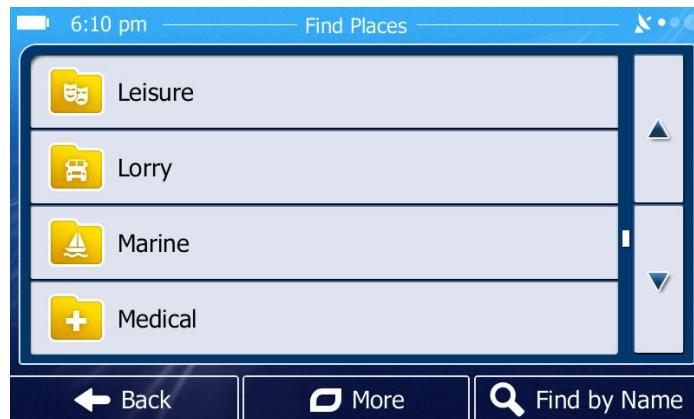

Example: To find a park around your destination, do as follows (starting from the Navigation menu):

- ➡ Tap Destination .
 - ➡ Tap Find Places .
 - ➡ Tap Around Destination Custom Search .
 - ➡ Tap Custom Search .
 - ➡ The list of place categories appears. Tap or slide your finger to browse the list, and tap Leisure .
 - ➡ Tap List All Places to browse the whole category, or tap Park and Recreation Area to narrow down your search.
 - ➡ Tap any of the list items.
 - ➡ Check the details and the location of the place, and then tap **Next**.
 - ➡ After a short summary of the route parameters, the map appears showing the entire route.
- Wait for a few seconds or tap **Go!** and start navigating.

The Map Screen

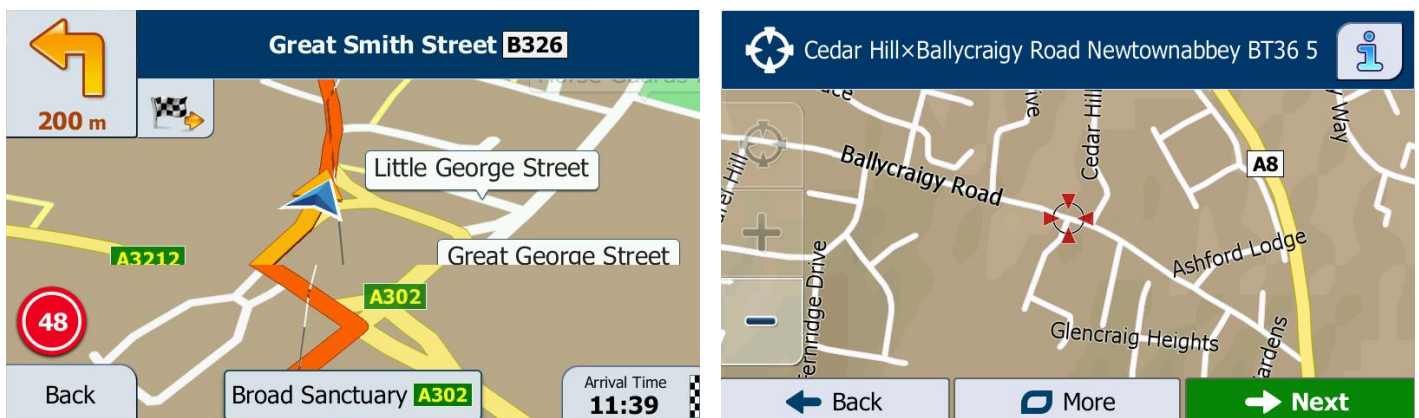

The Map screen is the most important and frequently used screen of the software. The

Vehimarker(a blue arrow by default) represents your current position, and the orange line shows the recommended route. There are screen buttons and data fields on the screen to help you navigate. During navigation, the screen shows route information.

At the top of the screen, you see your heading and the house numbers on left and right if you have not selected a route destination. When navigating a route, you see the next manoeuvre and the next street/road on your route. Tap either of them to open the route itinerary.


-Tap  to open the Quick menu with a selection of useful functions during navigation.

-Tap the map anywhere to explore the map around your current position. Additional map control buttons appear.

-Tap  to open three data fields on the map. Tap any of them to suppress the others. The default values for navigation (you can change them in Map settings):
the remaining distance to the destination,
the remaining time of the trip, and
the estimated time of the arrival at the destination.

-Tap  to open the Navigation menu.

Setting Menu

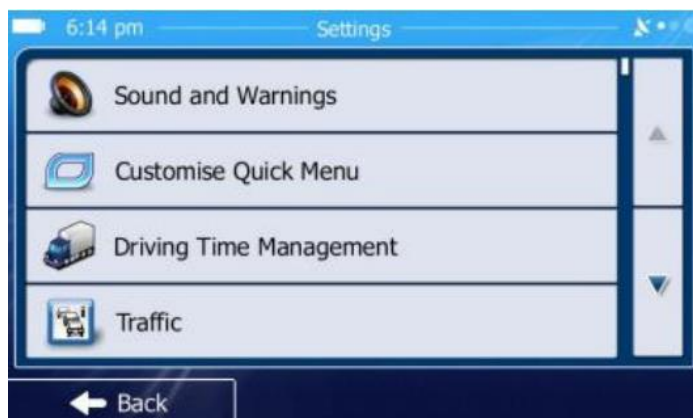

In the Navigation menu, tap , then tap . The Settings menu provides you with the following options (scroll the list to see all):

 **Sound and Warnings** : Adjust the different sound volumes, change the voice guidance profile, or enable and set up warnings.

 **Customise Quick Menu** : Change the function buttons in the Quick menu of the Map.

 **Lorry** : Before selecting one of the Lorry profiles as the Vehicle type used in route calculation, set up the editable lorry attribute profile with the parameters of your lorry. These parameters will be used in route calculation.

 **Traffic** : You can adjust traffic related settings such as using preloaded statistical.

 **Route Settings** : Select the type of vehicle you are driving, the road types used in route planning, and the route planning method.

 **Map Settings** : Adjust map related settings: change the daytime and night colour schemes, change the default zoom level, switch between 2D and 3D map, suppress buildings or change the Vehimarker.

 **Visual Guidance Settings** : Adjust how the software helps you navigate with different kinds of route related information on the Map screen.

 **Display** : Turn the menu animations on or off, select a different skin for the application, or adjust the display backlight.

 **Regional** : Change the program language, the time format, units or the time zone.

 **Trip Monitor** : Turn the automatic trip or track log saving on or off, check the current size of the trip database.

 **Log Collection** : The application collects usage information and GPS logs and is generally only to be used by analysts, enabling this will take up space on your device and is generally best to be left disabled.

 **Start Configuration Wizard** : The wizard takes you through the setup process allowing you to customize parameters.

 **Reset to Defaults** : Delete all saved data and reset all settings to their factory default.

USER MANUAL

Function of Physical Buttons

Switch On and Off

To switch on the device, press and hold the button down at the top left of the device for up to 3 seconds then release. You should see the start-up screen. Do the same to turn off.

Headphone port, 3.5mm

Support connecting 3.5mm headphones to listen.

TF card slot

Support inserting 2G to 32G map TF card.

USB interface

Connect to car USB charger or wall charger for charging or a Windows PC & Notebook for data transfer.

Reset

If the device fails to boot or freeze, please use a thin tip to plug into the RESET hole to restart the device.

Device Interface Menus


	Tap to enable navigation.If the launching fails,please go to make path settings on  .
	Tap to transmit sound from the device to your vehicle's stereo.Please read setting details in page 20
	Search satellites outdoors only. Successful positioning requires at least 3 channels.
	Tap to the below functions setting. Volume,Backlight,Language,date/Time,System Info,Factory Reset
	Adjust the volume from silent to maximum,tap  to complete.
	Adjust the backlight from weak to strong,tap  to complete.
	Choose a language,tap  to complete.
	Adjust date,time,12H/24H and time zone,tap  to complete.
	Make navigation path. Please read setting details in page 15
	Show the information of hardware and software.

Locating a GPS Signal

The device can require up to 10 minutes to determine your location when first turned on. In future, your location should be found much sooner, usually within a few minutes. To ensure a strong GPS signal, you should use the device outdoors and keep the device up right. It may be difficult to pick up a signal inside buildings. To ensure a good signal whilst driving, make sure the device is installed in a suitable location without anything blocking the back of the device such as anywhere below the dash.

Launching Navigation

Tap the navigation section on the home screen to launch the navigation application. **Please note the home screen user interface may vary on different models.** See below image of the Home Screen

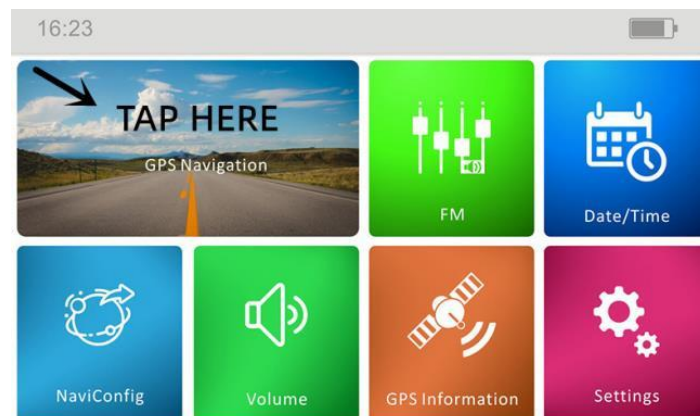

Navigation Not Working?


If the navigation application fails to launch or run when tapping the navigation button, you will need to set the navigation file path in the NaviConfig application located on the home screen.

The navigation file path is set so that the system can run the navigation software and must be set correctly or will fail to launch.


If the device has been factory reset by pressing the reset button at the back of the device, you will need to set the navigation file path in the NaviConfig application.

Please see next section on setting the navigation file path in NaviConfig or watch the online video tutorials.

1, On the screen, tap NaviConfig

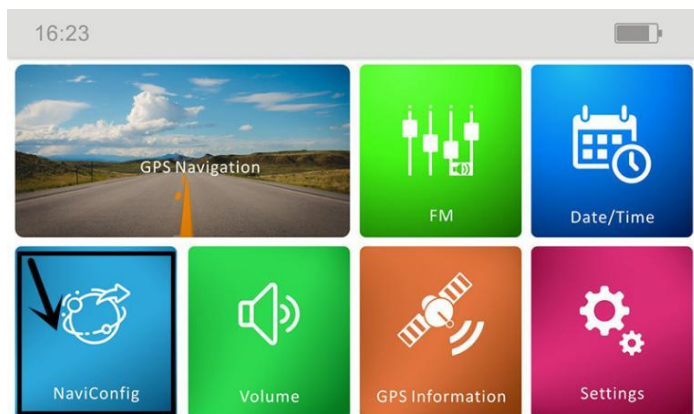

3, Double Tap ResidentFlash.

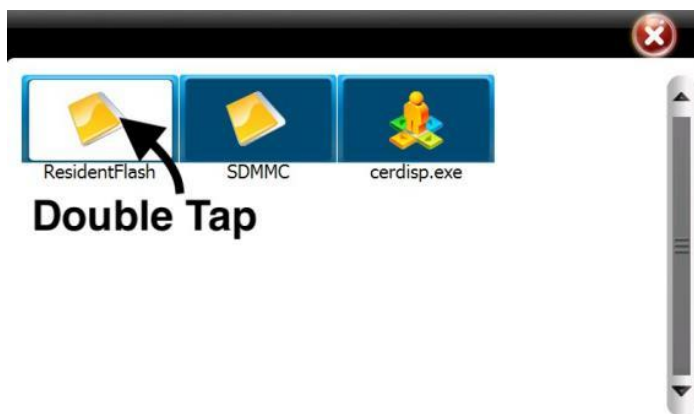

5, Tap the icon  .



The software should now launch.


2, Tap the box with 3 dots.



4, Double Tap the NAVI.EXE until you find this EXE file



6, Tap the GPS Navigation icon.

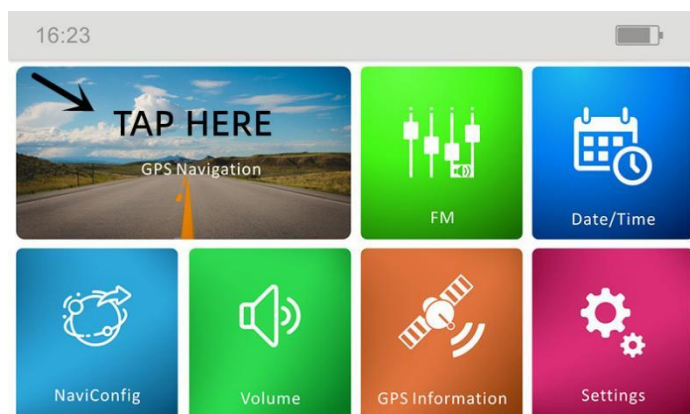

No Sound?

If your device has the FM function, please make sure the FM function is disabled. If left on, it will send sound through FM, not internal speakers.

The icons at the top of the screen will indicate which is being used.



Indicates sound through speakers.



Indicates sound through FM.

Disable FM by unchecking the check box.

Please also check volume levels, the master volume on the home screen and the volume settings within the navigation application.

Disable FM by unchecking the check box.

Please also check volume levels, the master volume on the home screen and the volume settings within the navigation application.



Setting Time and Date

Please make sure the GPS navigation time is correct by changing the time zone settings on the home screen **Settings>Date/Time**

Please make sure you observe the correct GMT, for instance, The Eastern Time Zone (ET) is an area 5 hours behind Greenwich Mean Time (GMT-5) during the winter months (referred to as Eastern Standard Time or EST) and 4 hours behind Greenwich Mean Time (GMT-4) during the summer months (referred to as Eastern Daylight Time or EDT).

Please also set the time zone in the navigation application by going to tools (located at the bottom of the Navigation Menu) then scroll down to Regional (the blue flag) Then to Time zone, the preferred setting is—**Auto Time Zone**


Please note depending on your location the home screen time may need to show one hour behind to show correctly in the Navigation application.

The time will update once the device has a signal.

Navigation Language Selection


To change language in the navigation application, go to tools or settings then scroll down to the blue flag

regional settings then select program language.

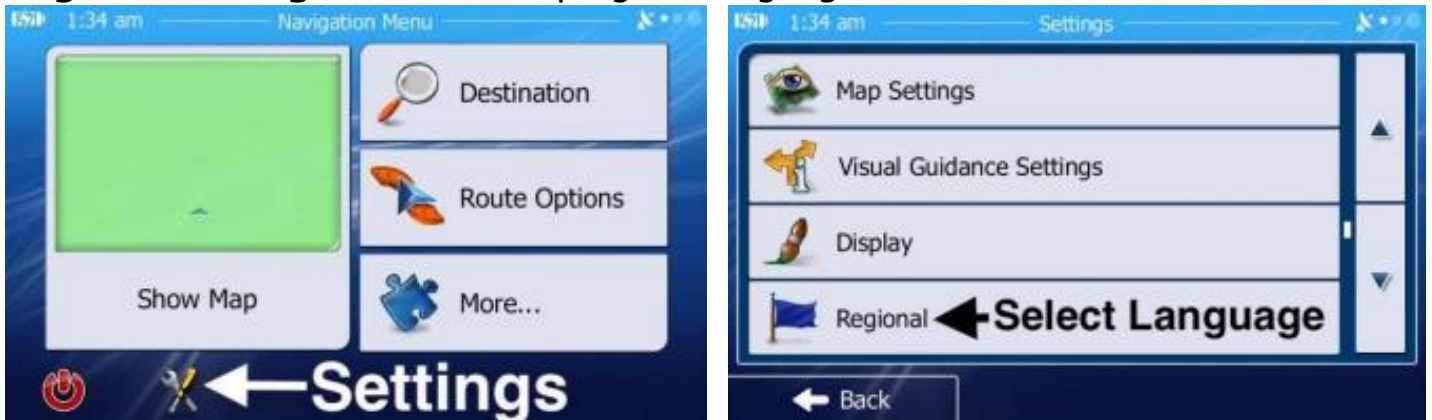

Navigation Voice Selection


To change navigation voice or language, in navigation mode go to **tools>sounds and warnings>voice language** ***Please note the street name and speed camera announcements will not be audible with natural voice selection, if you require audio for these alert types, please select a TTS voice. TTS voice selection can audibly announce street names and speed cameras.**

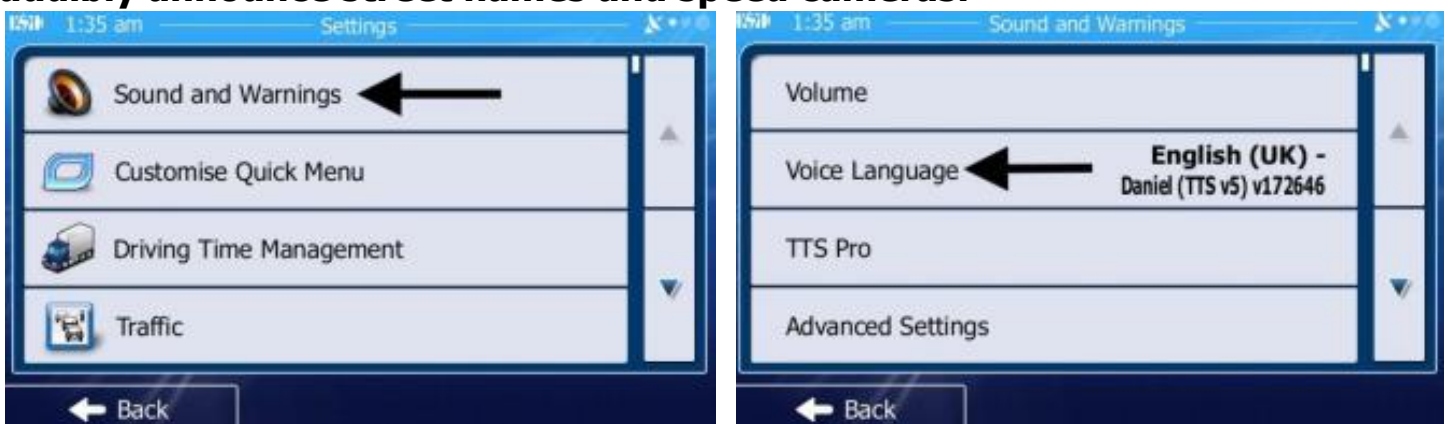

Vehicle Selection and Profile Settings



Trucks, Motorhomes, RV or Caravans must be used in truck mode.

In Navigation go to **Tools/Settings>Route Settings>Tap on vehicle** Select the vehicle type as truck and set the dimensions of the vehicle in the vehicle profile settings next to the vehicle selection. If you are using a car simply select car, you do not need to enter vehicle dimensions for car mode.

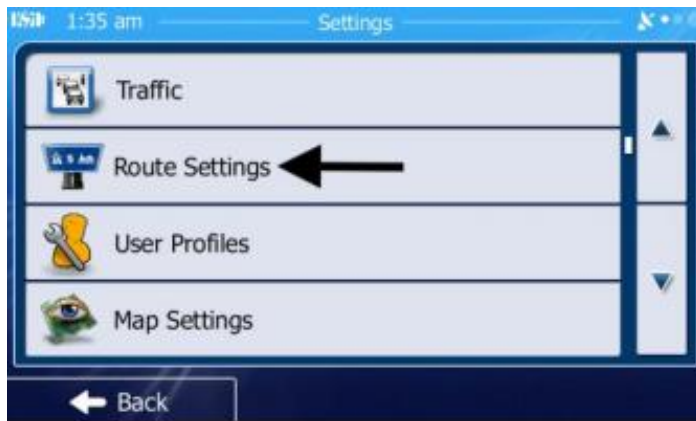

How to Set Units to KM or MPH

In navigation go to **Settings>Regional>Units and Formats>Distance** and select Kilometers or Miles.

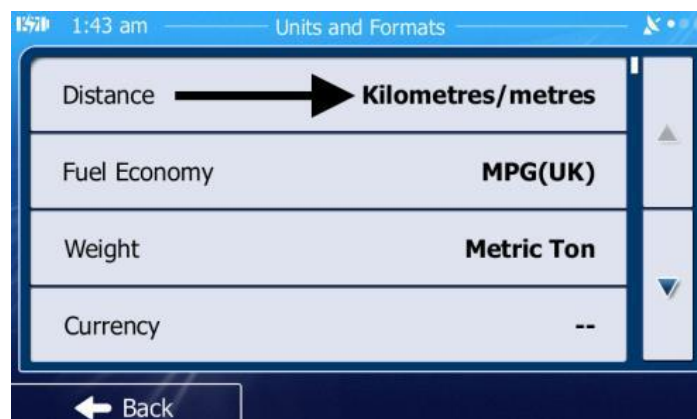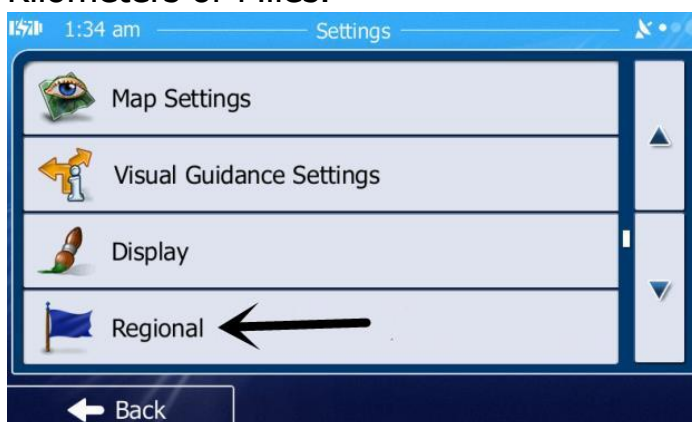

Navigation Data Fields

You can change the data fields located on the bottom right-hand side of the navigation screen.

Tap the data field on the bottom right-hand side of the navigation screen.

The data field will open 2 more data fields you can view while navigating.


You can customize the data fields by holding down the bottom data field for 2 seconds.



Tap the data field you would like to change on the left side, then select the information you would like to show in the data field on the right side.

In the Example below, we have selected the bottom data field to show the arrival time.

You can also change data fields without a route, **Tap**

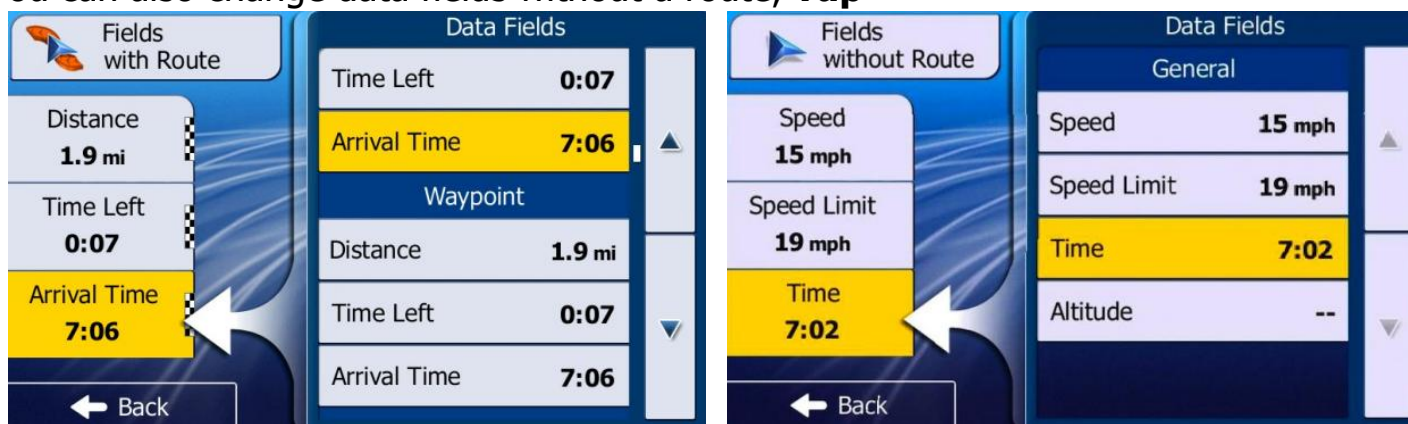

the above option – Fields without Route.

FM Transmitter

Only available on specific models and may be unavailable on your device

The FM transmitter can be used to transmit sound from the device to your vehicle's stereo, follow steps below if you wish to use this feature.

The FM setting must be disabled if not in use, or sound will not be heard from the device.

1. Locate an empty station on your vehicles FM frequency band, this frequency will be

used to sync with your device.

2. On the device home screen go to the FM settings and change the frequency to match the frequency on the vehicle's FM frequency band.

3. Next, please make sure the FM setting is turned on.

4. Sound from the device should now play through your vehicle's stereo.



Troubleshooting & FAQ

Q.Navigation application will not launch.

A. Please make sure the navigation file path is set correctly, see section page 14 – **Navigation File Path Configuration Settings (NaviConfig)**

Q.No Sound.

A. Please make sure the FM function is disabled, read page 16. You can also check the master volume on the home screen and check the volume settings in the navigation application – **Settings>sounds and warnings>volume**

Q.How do I change the time.

A. Change home screen time by going to **Settings>date/time** on the home screen, read page 16. To change time in the navigation application, go to **tools>Regional>Time Zone>Auto time zone**

Q.No GPS signal.

A. Please make sure you are somewhere open or outside, it can take up to 10 minutes to locate a signal using the device for the first time. Read page 14. **Reset GPS signal in the GPS viewer application located on the home screen.**

Q. Device not charging?

A. Please make sure the device is properly connected. If you find the charger has stopped working, please contact us.

Q. How do I change from Kilometers to Miles?

A. Please read page 18, tap GPS NAVIGATION, go to **Setting>Regional>Units and Formats>Distance**

Q. How to solve if the device is frozen?

A. Please use a needle to press the RESET hole on the back shell. If it still cannot be resolved, please contact us to replace it with a new device.

Manuel de l'utilisateur

Français

Table des matières

Veillez lire d'abord.....	23
1 Précautions.....	24
2 Fonctions des Boutons Physiques	25
3 Menus du Dispositif GPS.....	26
4 Configurations Nécessaires.....	28
4.1 Recherche du signal GPS.....	28
4.2 Réglage de l'heure.....	28
4.3 Réglage des langues.....	29
4.4 Réglage du volume.....	29
4.5 Changement des unités de mesure.....	30
5 Navigation.....	30
5.1 Entrer une adresse.....	30
5.2 Recherche rapide d'un Lieu d'intérêt (POI).....	31
5.3 Sélectionner un point de la carte comme destination.....	31
5.4 Saisir les coordonnées de la destination.....	32
5.5 Afficher tout l'itinéraire sur la carte.....	32
5.6 Enregistrer une position comme destination favorite.....	33
5.7 Réglage du véhicule.....	33
6 Dépannage et FAQ.....	35

Veillez lire d'abord

- l'appareil est livré avec les dernières cartes préinstallées et vous n'avez pas besoin de

les mettre à jour immédiatement.

- les mises à jour sont effectuées chaque année et vous serez averti lorsque des mises à jour seront disponibles, avec des instructions de mise à jour.

- les appareils GPS de navigation par satellite ne peuvent être utilisés qu'à l'extérieur.

Aucun signal ne peut être recherché à l'intérieur. C b

- ne pas utiliser le câble USB pour charger dans la voiture. Utilisez uniquement le chargeur fourni pour charger les appareils dans votre véhicule.

- ne connectez pas le câble USB à l'ordinateur pour charger l'appareil. Il a une très faible puissance et ne peut pas charger complètement l'appareil.

- le câble USB ne peut être utilisé que pour connecter l'appareil à l'ordinateur lorsqu'une mise à jour est recommandée.

- l'application gps ne fonctionne pas lorsqu'elle est connectée à l'ordinateur et affiche le mode de transfert de données à l'écran.

1 Précautions

Utilisez l'appareil uniquement avec les chargeurs, supports ou câbles USB fournis.

Le câble USB fourni est utilisé pour charger uniquement à partir d'un chargeur mural. Ne charge pas depuis l'ordinateur. Il est également utilisé pour se connecter à l'ordinateur uniquement lors de la mise à jour des cartes, etc. (il est essentiel de suivre les instructions fournies avec la mise à jour, sinon les cartes peuvent être endommagées)

La réception satellite nécessite une « vue » dégagée du ciel. Si à l'intérieur, le Sat Nav ne fonctionnera pas comme prévu. Effectuez la configuration à l'extérieur ou dans le véhicule, cela peut prendre quelques minutes pour obtenir la première position, mais par la suite, ce sera beaucoup plus rapide.

Il est recommandé de garder le câble de charge connecté lors de l'utilisation dans le véhicule, car la réception satellite consomme beaucoup d'énergie et, en raison de limitations physiques, la batterie a une capacité assez faible.

Il n'est pas recommandé de sélectionner FM car cela coupe le haut-parleur interne. Si une fois la configuration terminée, vous souhaitez envoyer le son à la radio du véhicule, vous pouvez alors le sélectionner. Veuillez noter que la radio devra être syntonisée sur une fréquence vide, la même fréquence également sur le Sat Nav afin que la radio ne puisse pas être écoutée dans ce mode.

2 Fonction des Boutons Physiques

Mise en marche/arrêt

Après avoir été connecté à l'alimentation, le navigateur GPS s'allume automatiquement. Après avoir débranché l'alimentation, il y a 3 options, veille/arrêt/annulation. Si vous ne tapez pas sur aucune de ces options, le navigateur GPS s'éteindra automatiquement dans les 10 secondes.

Port pour les écouteurs

Permet d'insérer un casque de 3,5 mm.

Port pour carte mémoire

Vous pouvez installer des fichiers de cartes dans un emplacement de carte mémoire TF pour naviguer. Vous pouvez également installer des fichiers multimédia pour les lire. La carte mémoire TF supporte 2gb-32gb. Il est conseillé de ne pas l'utiliser car les cartes sont préinstallées dans la mémoire de l'appareil.

Interface USB

Connectez-le au chargeur USB de la voiture ou au chargeur mural pour le recharger ou à un ordinateur Windows pour transférer des données.

Réinitialiser

Si l'appareil ne démarre pas ou se bloque, vous pouvez utiliser un embout fin pour le brancher dans le trou RESET afin de redémarrer l'appareil.

3 Menus du Dispositif GPS

	Cliquez sur ce bouton pour activer la navigation. Si l'appareil ne
--	--

	démarre pas, vérifiez que le chemin est correct dans NaviConfig. Le chemin devrait être: \ResidentFlash\NAVI\Navi.exe
	La fonction d'émission FM peut envoyer le son de votre navigateur satellite à l'audio de votre voiture. Méthode : 1. Connectez votre navigateur satellite au chargeur de voiture. 2. Réglez la fréquence FM de la voiture sur une fréquence sans radio. 3. Cochez ✓ "Utiliser la FM", réglez la même fréquence que celle de la voiture, tapez  pour terminer le réglage du jumelage. Si vous n'utilisez pas la FM dans l'appareil GPS, ne cochez pas FM. Sinon, l'appareil sera mis en mode silencieux.
	Un positionnement réussi nécessite qu'au moins 3 canaux deviennent verts, pour un total de 12 canaux. Après un positionnement réussi, la partie droite indique que le signal est valide. Si le positionnement échoue, vérifiez si l'emplacement par défaut est défini dans la navigation. Méthode : Navigation->Destination->Trouver une adresse, saisissez une adresse autour de votre position.
	Appuyez sur pour accéder aux paramètres de fonctionnalité ci - dessous.

	Volume,rétroéclairage,langue,date/heure, informations système, Réinitialisation d'usine
	Réglez le volume du silence au maximum
	Auster le rétroéclairage de faible à fort
	Choisir une langue
	Ajustez la date, l'heure, 12h / 24h et le fuseau horaire
	Configurez le trajet de navigation. Tapez sur ,tapez deux fois ,tapez deux fois ,tapez deux fois , tapez sur  pour terminer. Tapez sur  "Exécuter automatiquement le logiciel de navigation au démarrage". Il est déconseillé de cocher cette case.
	Affiche des informations sur le matériel et les logiciels.

4 Configurations Nécessaires

4.1 Recherche du signal GPS

Dans le menu principal, cliquez sur , il y a 12 canaux. Si plus de 3 canaux ont capté le signal satellite, le signal de l'appareil GPS est bon.

Dans la navigation GPS, tapez sur <Carte> dans le menu, recherchez les satellites jusqu'à ce que vous voyez l'icône de localisation est fixé à votre place.

Si l'emplacement réel de la carte ne s'affiche pas dans la navigation GPS, peut-être dans un autre pays, vérifiez si la carte de votre emplacement a été préchargée.

Vous pouvez le vérifier de la manière suivante : Navigation GPS->Destination->Chercher l'adresse, saisissez une adresse autour de votre emplacement.

4.2 Réglage de l'heure

Menu principal de l'appareil ->  -> Date/Heure , réglez la date, l'heure et le fuseau horaire.

Menu principal de Navigation ->  -> Régional  Régional -> Fuseau horaire, réglez le fuseau horaire de votre emplacement. Remarque: Ne cochez pas la case " Utiliser le fuseau horaire automatique ", sinon l'heure pourrait s'afficher de manière incorrecte car l'heure change en fonction de l'emplacement de votre navigateur GPS.

Si l'emplacement GPS est dans un autre pays, par exemple en Allemagne, il affichera l'heure de l'Allemagne et non l'heure correcte du Royaume-Uni.

Menu principal de Navigation ->  -> Régional  Régional -> Unités et Formats, ajustez le format de l'heure, de la date et du déchiffreur de date.

4.3 Réglage des langues


Pour changer la langue, il y a 3 paramètres à modifier: langue du menu de l'appareil, langue du menu de navigation et langue de la voix de navigation.

Langue Menu principal de l'appareil : Paramètres-> Langue, faites défiler vers le bas pour choisir une langue.

Langue du menu de navigation:

Menu principal -> Navigation->  -> Régional  Régional -> Langue du programme, sélectionnez une langue, cliquez sur . Puis redémarrez le programme de navigation.

Langue de la voix de navigation :

Langue de la voix de navigation :-> Navigation->  -> Son et Avertissements  Sons et avertissements -> Langue de la voix,  Langue du guide, sélectionnez une langue, cliquez sur . Puis redémarrez le programme de Navigation..

4.4 Réglage du volume

Si vous trouvez que l'appareil est en mode muet, veuillez suivre les étapes suivantes.

si vous avez activé la fonction FM. Si oui, désactivez-la, menu principal de l'appareil->



, désactivez "Utilisation FM ".

Vérifiez le réglage du volume dans le menu principal : menu principal de l'appareil ->



, réglez le volume au maximum.

Vérifiez les paramètres de volume dans la navigation : Menu principal ->  -> tapez



Sons et avertissements

->

Volume

, réglez le volume au maximum.

4.5 Changement des unités de mesure


Menu principal-> tapez sur , puis sur  Régional, puis sur Unités et formats pour modifier l'unité de distance, l'économie de carburant, la devise du poids, le format de l'heure, le format de la date, le délimiteur de date et le format d'affichage des coordonnées.

5 Navigation


5.1 Entrer une adresse

Pour entrer une adresse comme destination, procédez comme suit :

1. Si vous êtes sur l'écran Carte, appuyez sur  pour revenir au menu Navigation.
2. Dans le menu Navigation, appuyez sur les boutons suivants : , .
3. Par défaut, la navigation propose le pays et la ville où vous vous trouvez. Si nécessaire, appuyez sur Pays, saisissez les premières lettres de le nom du pays sur le clavier et sélectionnez un pays dans la liste des résultats.
4. Si nécessaire, sélectionnez une nouvelle ville/village, appuyez sur Ville, commencez à saisir le nom de la ville/village sur Clavier, trouvez la ville dont vous avez besoin, ou sélectionnez-en une  si elle ne correspond pas sur le clavier.
5. Vous pouvez saisir un CODE POSTAL, appuyez sur Ville, onglet pour ouvrir le clavier numérique, commencez à saisir le code postal, trouvez celui dont vous avez besoin ou sélectionnez-en un s'il ne correspond pas au clavier. S'assurer saisir la barre d'espace.
Exemple : pour le code postal G11 6BH, vous devez le saisir comme G-1-1-
ESPACE-6-B-H, pas seulement G-1-1-6-B-H.

6. Entrez le nom de la rue, appuyez sur  , commencez à saisir le nom de la rue sur le clavier, trouvez la rue dont vous avez besoin, ou sélectionnez-en un

 s'il ne correspond pas sur le clavier.

7. Entrez le nom de la rue, appuyez sur  , commencez à entrer le numéro de rue sur le clavier, trouvez le numéro dont vous avez besoin. Si le numéro de maison saisi est introuvable, le milieu de la rue est sélectionné comme destination.

5.2 Recherche rapide d'un Lieu d'intérêt (POI)

Vous pouvez sélectionner votre destination parmi les lieux d'intérêt inclus avec cette navigation. En utilisant le même écran, vous pouvez trouver un lieu de quatre manières :

Si vous êtes sur l'écran Carte, appuyez sur  , puis appuyez sur  .

Si vous êtes dans le menu Navigation, appuyez sur  , puis appuyez sur  . À l'aide du clavier, commencez à saisir le nom du lieu.

Après avoir saisi quelques lettres, appuyez sur  pour ouvrir la liste des lieux dont les noms contiennent la séquence de caractères saisie.

5.3 Sélectionner un point de la carte comme destination

1. Si vous êtes sur l'écran de la carte, appuyez sur  pour revenir au menu Navigation.

2. Dans le menu Navigation, appuyez sur les boutons suivants :  ,  , .

3. Localisez votre destination sur la carte : déplacez et redimensionnez la carte selon vos besoins.

4. Appuyez sur l'emplacement que vous souhaitez sélectionner comme destination. Le

curseur () y apparaît.

5. Appuyez sur  pour sélectionner le curseur comme destination.

6. Après un bref résumé des paramètres de l'itinéraire, la carte s'affiche et affiche l'intégralité de l'itinéraire. Le parcours est calculé automatiquement. Appuyez sur

 Plus pour modifier les paramètres de l'itinéraire, ou appuyez sur  Aller et commencez votre trajet.

5.4 Saisir les coordonnées de la destination

Vous pouvez également sélectionner une destination en saisissant ses coordonnées.

Faites comme suit :

1. Si vous êtes sur l'écran Carte, appuyez sur  pour revenir au menu Navigation.
2. Dans le menu Navigation, appuyez sur .
3. Ouvrez  le menu et appuyez sur .
4. Vous pouvez saisir les valeurs de latitude et de longitude dans l'un des formats suivants : degrés décimaux ; degrés et minutes décimales ; ou degrés, minutes et secondes décimales.
5. (facultatif) Si nécessaire, appuyez sur  puis  et saisissez les coordonnées au format UTM.
6. Lorsque vous avez terminé, appuyez sur .

5.5 Afficher tout l'itinéraire sur la carte

Il est facile d'obtenir un aperçu cartographique de l'itinéraire actif. Faites comme suit :

1. Si vous êtes sur l'écran Carte, appuyez sur  pour revenir au menu

Navigation.


2. Dans le menu Navigation, appuyez sur  .

3. Appuyez sur  . L'itinéraire actif est affiché dans toute sa longueur sur la carte avec des informations et des commandes supplémentaires.

5.6 Enregistrer une position comme destination favorite

Vous pouvez ajouter n'importe quel emplacement aux Favoris, la liste des destinations fréquemment utilisées.

1. Sélectionnez une destination comme décrit précédemment. Il peut s'agir d'une adresse, d'un lieu, n'importe quel emplacement sur la carte, une destination précédemment utilisée à partir de l'historique, etc. Lorsque la carte plein écran apparaît avec l'emplacement sélectionné au milieu, appuyez sur  .

2. Appuyez sur  .

3. (facultatif) À l'aide du clavier, vous pouvez modifier le nom proposé pour le favori.

Appuyez  pour entrer chiffres ou symboles.

3. Appuyez sur  pour enregistrer l'emplacement en tant que nouvelle destination favorite.

5.7 Réglage du véhicule

Le mode véhicule par défaut est le mode camion. Vous pouvez le modifier en fonction de votre demande réelle. Procédez comme suit :

Navigation principale ->  -> Paramètres d'itinéraire  ->

Véhicule, choisissez votre type de véhicule et cochez-le parmi 7 modes de véhicules, voiture/piéton/Piéton/urgence/bus/taxi/camion (camion). Après avoir sélectionné le

mode véhicule, cliquez sur  l'icône sur la même ligne pour modifier les informations de base de votre véhicule telles que la longueur, la largeur, la hauteur et la vitesse maximale.

6 Dépannage et FAQ

Q. L'application de navigation ne se lance pas.

R. Assurez - vous que le chemin du fichier de navigation est correctement défini, lisez la page 28. 

Q. Pas de son.

R. Veuillez vous assurer que la fonction FM est désactivée.

Q. Comment changer l'heure ?

R. Modifiez l'heure de l'écran d'accueil en accédant aux paramètres> date / heure sur l'écran d'accueil. Pour changer l'heure dans l'application de navigation, allez dans les paramètres *le tournevis et la clé* >Régional>Fuseau horaire>Fuseau horaire automatique

Q. Pas de signal GPS.

R. Veuillez vous assurer que vous êtes dans un endroit ouvert ou à l'extérieur, cela peut prendre jusqu'à 10 minutes d'utilisation de l'appareil pour la première fois, mais commencera à reprendre plus tôt. Réinitialisez le signal GPS dans l'application d'informations GPS située sur l'écran d'accueil

Q. Comment passer de Kilomètres à Miles ?

R. En mode navigation, accédez à Paramètres> Régional> Unités et formats> Distance

Q: si l'appareil est gelé, comment le résoudre?

A. Veuillez appuyer sur le trou Reset sur le boîtier arrière avec une aiguille. Si cela ne peut toujours pas être résolu, contactez - nous pour remplacer un nouvel appareil.

2023©OHREX. All rights reserved.

